

Hardware


 Threaded Screw
x2

 Flat Washer
x4


 Flathead Allen Screw
x4

 Allen Wrench
x1

1

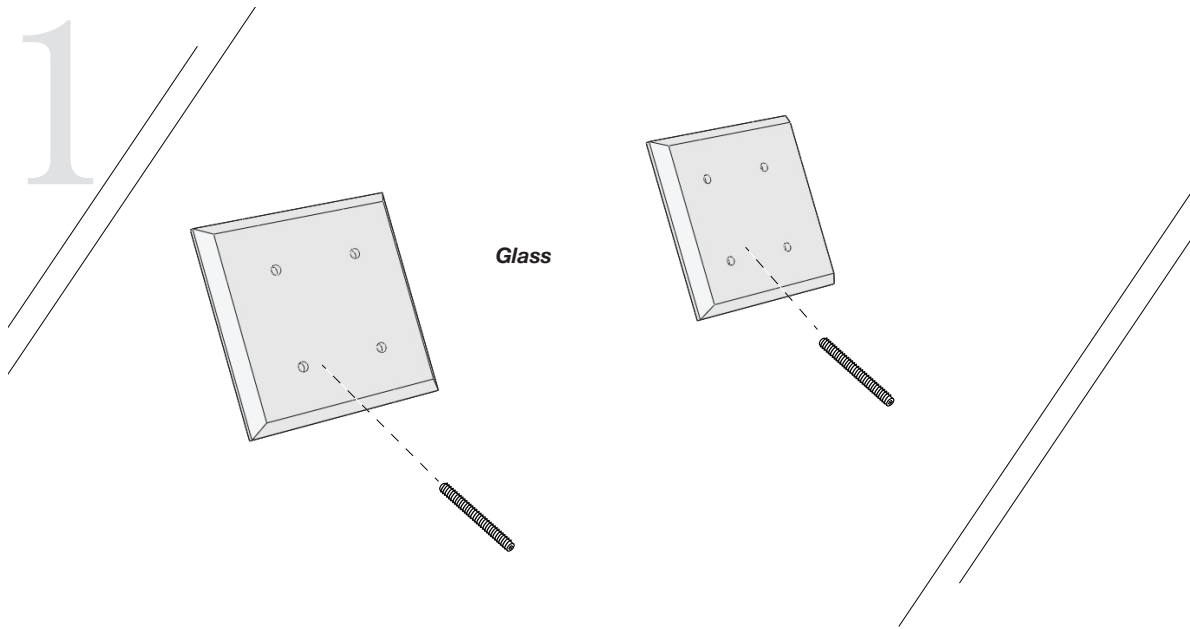

2

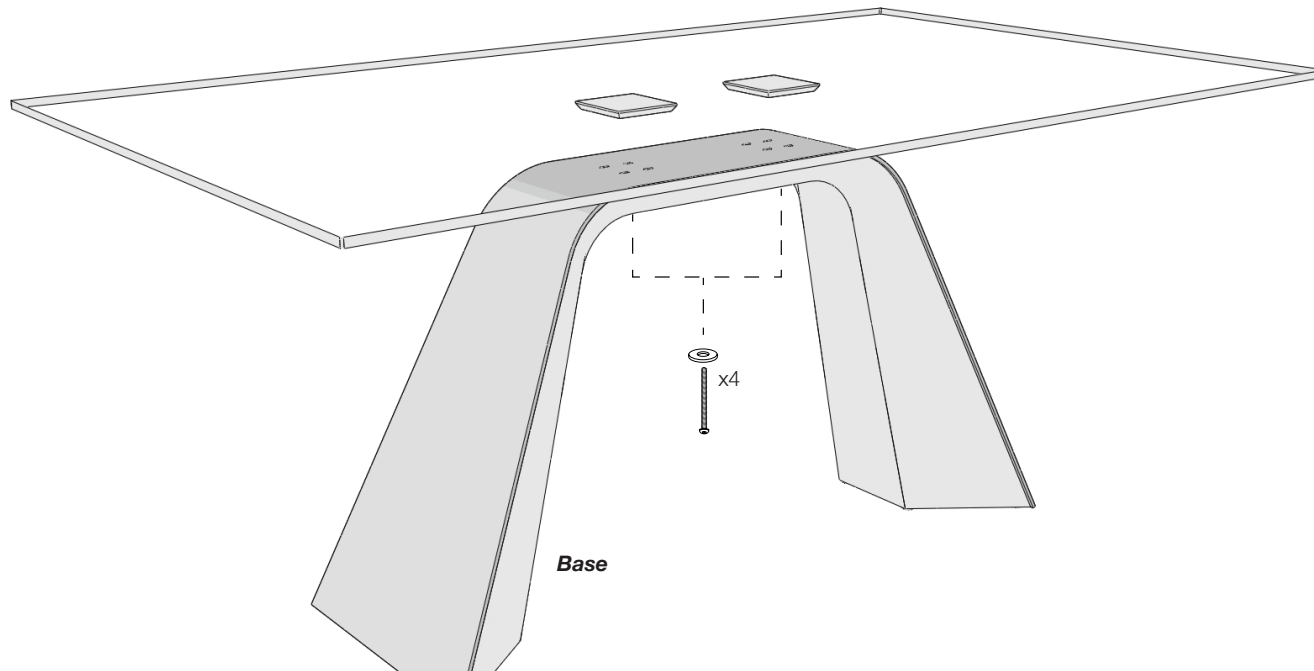

Using the threaded screws as guides, carefully place glass on base. Remove threaded screws once glass is aligned with base.