



Hardware

 Set Screw
x2



 Washer
x4

 Buttonhead Allen Screw
x4

 Allen Wrench
x1

1

Place one threaded screw on each glass plate.

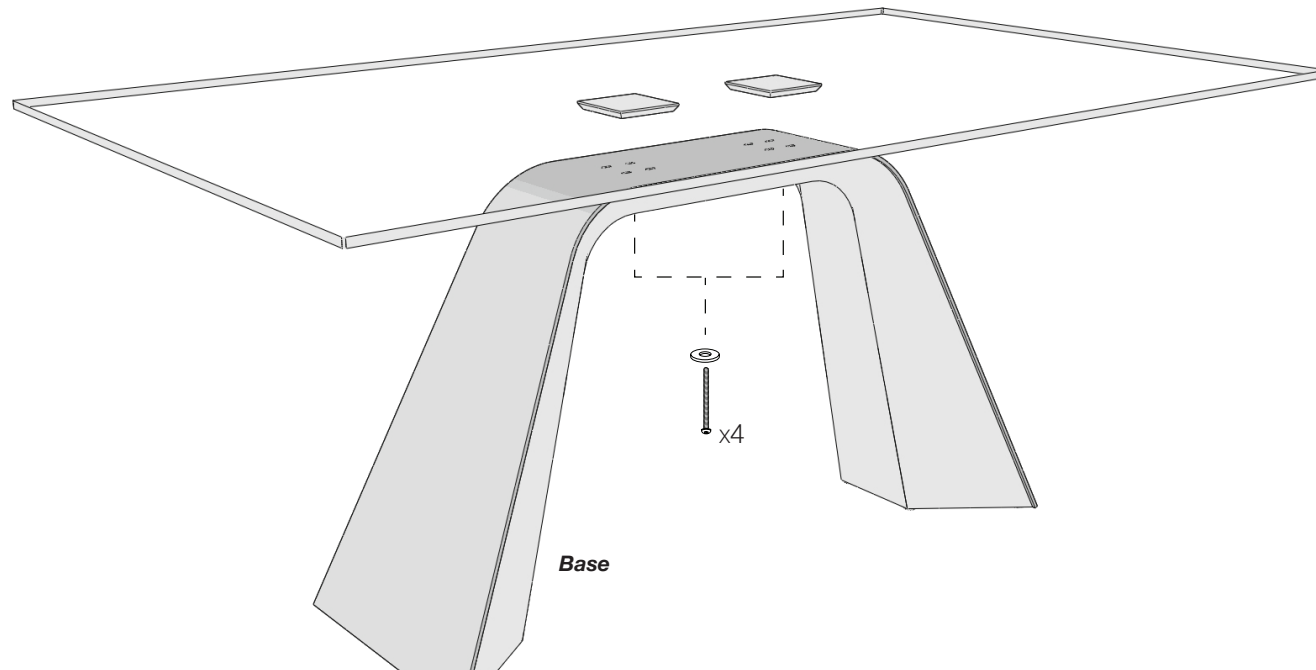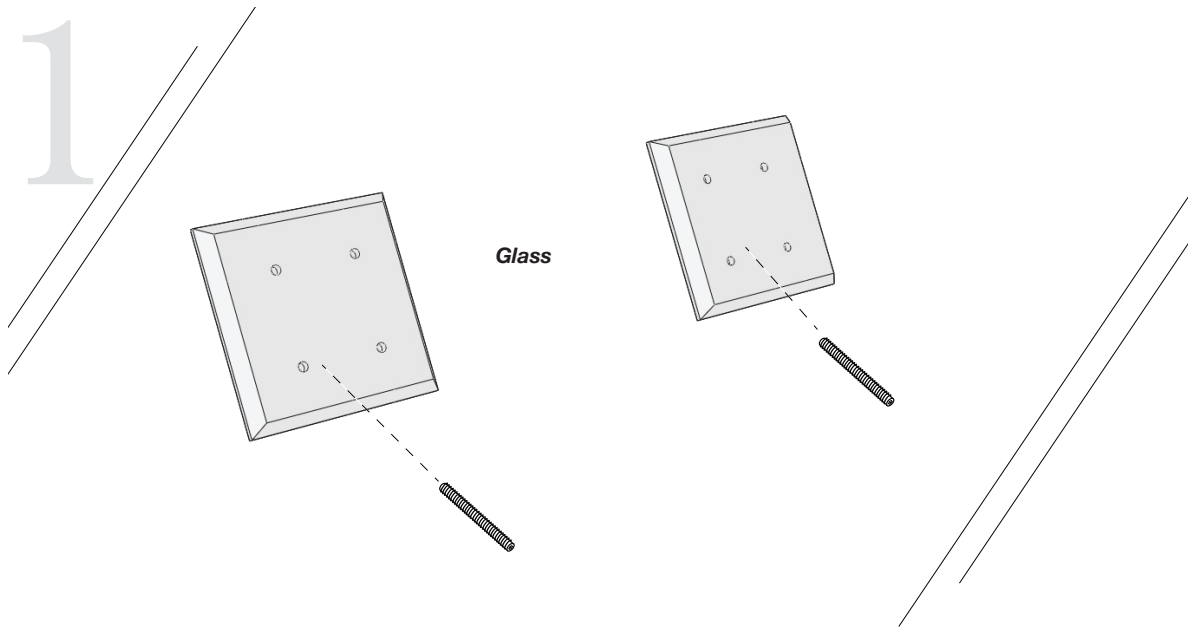

2



Using the threaded screws as guides, carefully place glass on base. Remove threaded screws once glass is aligned with base.

HAND TIGHTEN - DO NOT USE POWER TOOLS