


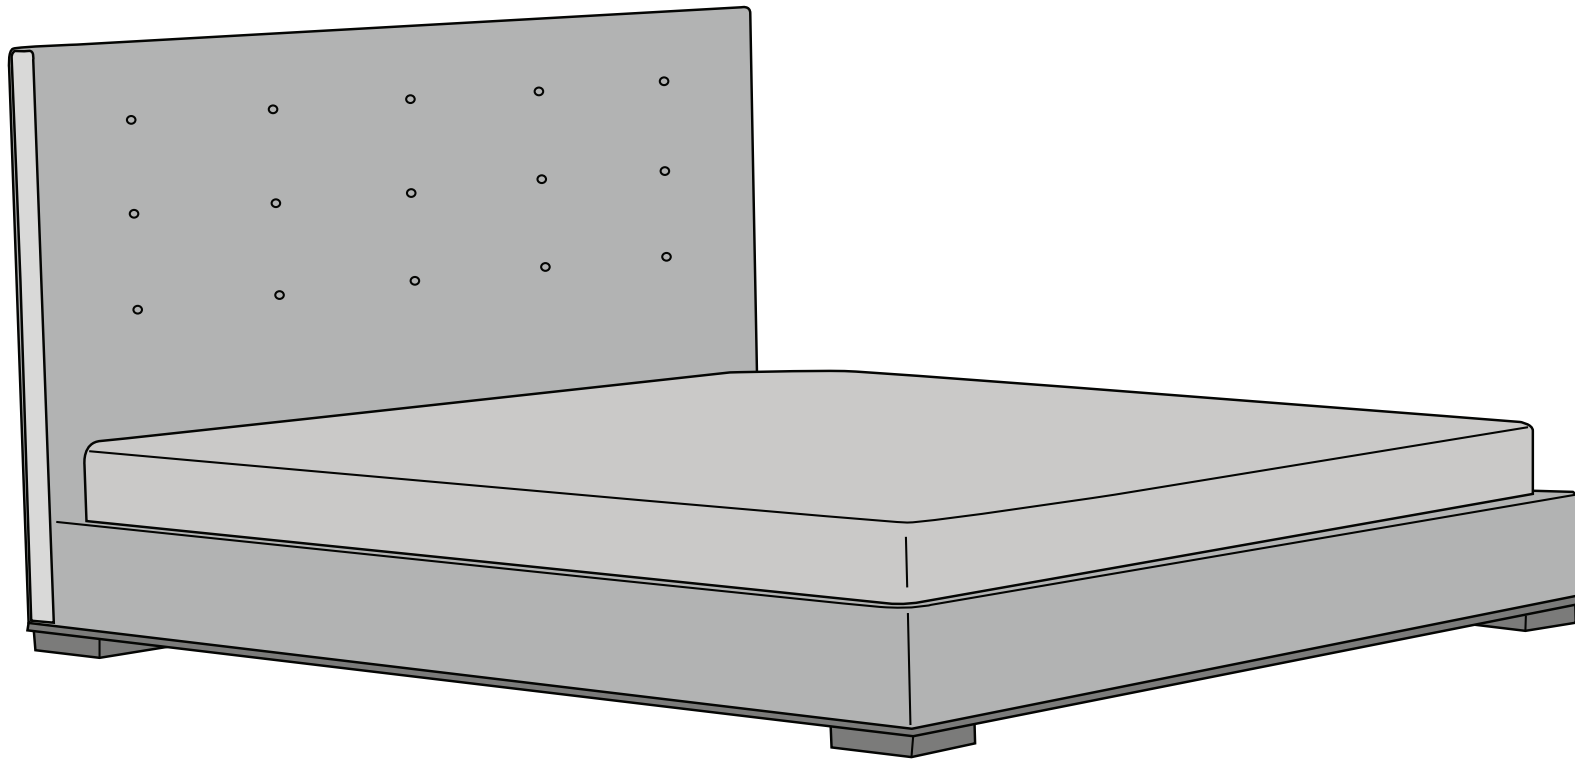

9021Q Queen Bed
9021CK California King
9021EK Eastern King



Hardware

 Button Head Screw
x16

 Washer
x22

 Flathead Allen Screw
x4


 Button Head Screw
x4

 Lock Washer
x4


 * Flathead Allen Screw
x2

 Small Allen Wrench
x1


 Large Allen Wrench
x1

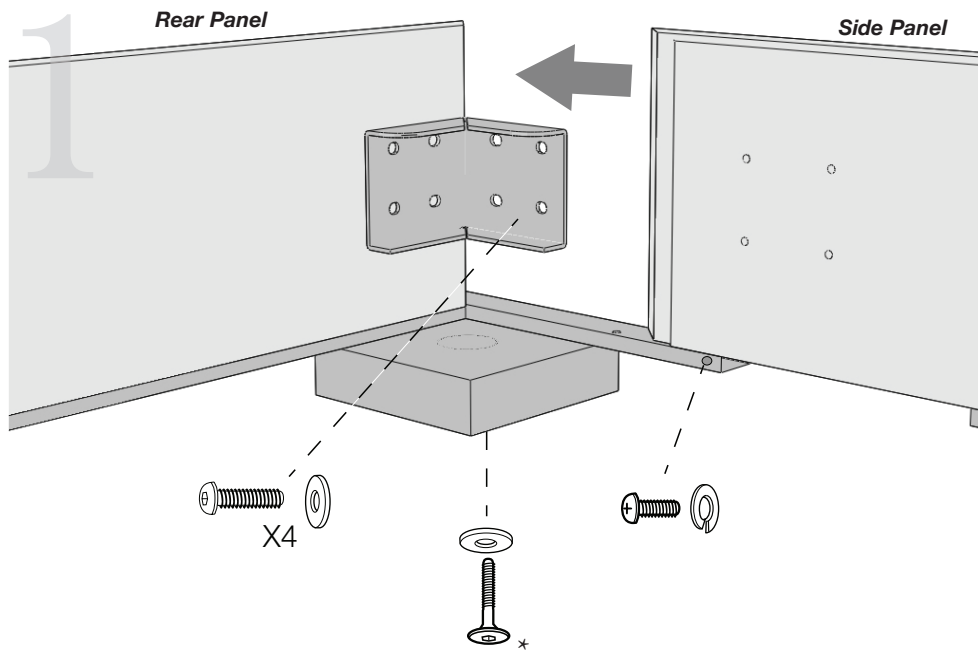


Align rear panel with side panel and secure as shown. Adjust as needed for tight fit.
Repeat on opposite side.

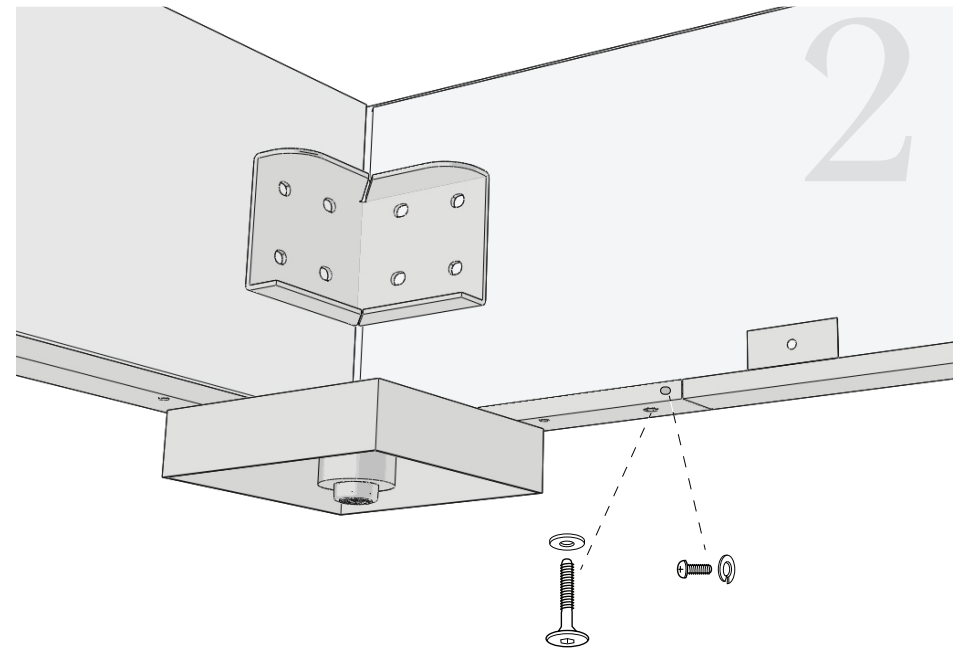

Before attaching to headboard, secure as shown. Repeat on opposite side.

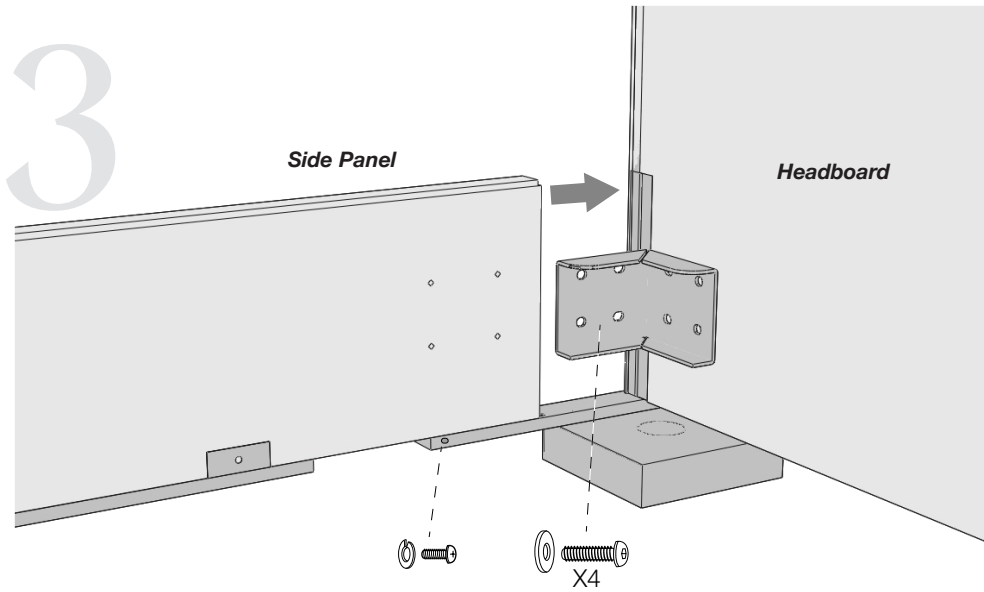

Align side panels with headboard and secure.

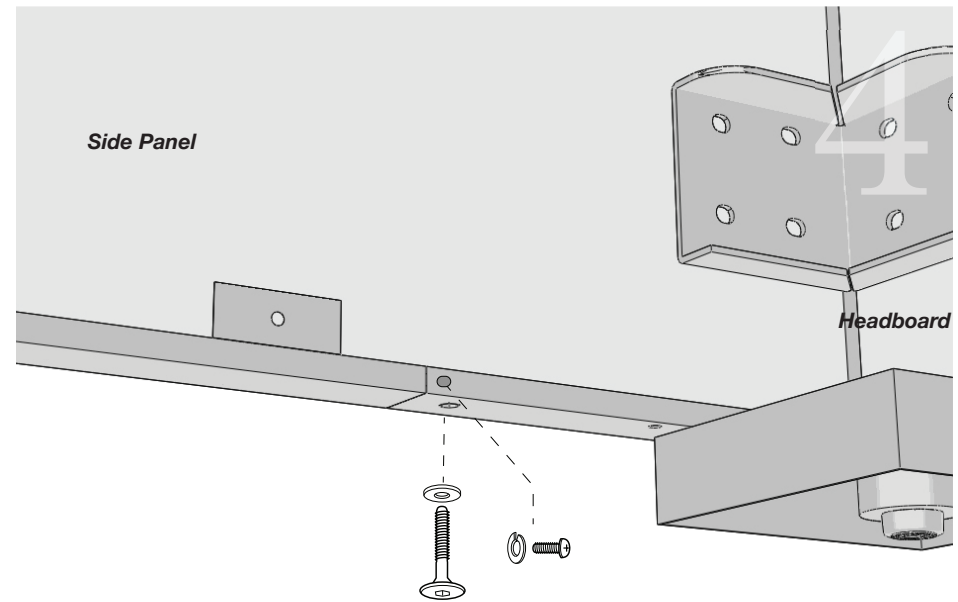

Tighten all screws to finish assembly.